

# 2200 Series Waste Oil Unit

## Operating Instruction and Data Sheet



### Operation

- 1) Set the hopper to the desired height and lock in position using the hopper locking screw.
- 2) Drain oil into the unit through the hopper. The mesh in the neck of the hopper is designed to catch large items (screws etc.) before they enter the tank.
- 3) The oil level indicator on the top of the unit will begin to rise when the tank is in need of emptying. Do not ignore this as continued use will result in oil spilling from this aperture.
- 4) Connect the 3/4" BSP Quick Release oil delivery hose to the oil discharge probe on the top of the unit and connect the other end of the discharge hose to suitable bulk collection pipework. **ALWAYS CONNECT THE OIL DISCHARGE HOSE BEFORE CONNECTING THE AIR LINE TO THE PUMP**
- 5) Connect to a suitable airline supply using a 1/4" quick release connector
- 6) The regulator is factory set to provide a steady discharge flow and cannot be adjusted.
- 7) When the unit is empty disconnect the air line. Do not leave the air line connected to the unit when the tank is completely discharged as this can damage the pump.