


MODEL 2129 205 Ltr DRUM TROLLEY

Assembly Instructions

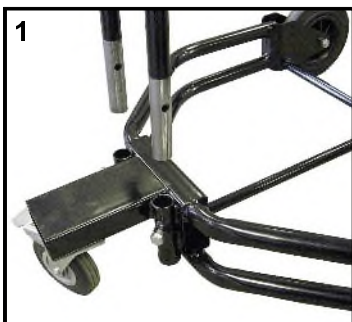

1

1) Insert handle into support tubes and push down to stops.



2

2) Fully tighten the clamping screws using an appropriate size spanner.



3

3) Screw pump mounting collar into pump bracket and tighten.



4

4) Insert pump and tighten clamp collar. To reduce the possibility of pump damage make sure that the pump is set as low as possible.



5

5) Screw airline Quick release coupling probe into pump and tighten.




6

6) Fit sealing washer to outlet adapter and screw and tighten into pump.



7

7) Attach Inlet hose to bottom of pump and fully tighten.

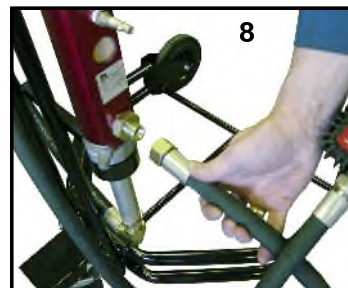

8

8) Attach outlet hose (with oil gun and flowmeter) to pump outlet adapter and tighten.



ERNEST H. HILL LIMITED

10-12 MEADOWBROOK PARK - STATION ROAD - HALFWAY - SHEFFIELD S20 3PJ - ENGLAND

Telephone: +44 (0) 114 248 4882

web site: <http://www.hillpumps.com>


Fax: +44 (0) 114 248 9142

e-mail: sales@hillpumps.com

MODEL 2129 205 Ltr DRUM TROLLEY

Assembly Instructions

Load drum onto trolley and slide to rear position (Conform with Health and Safety Regulations regarding manual handling.)

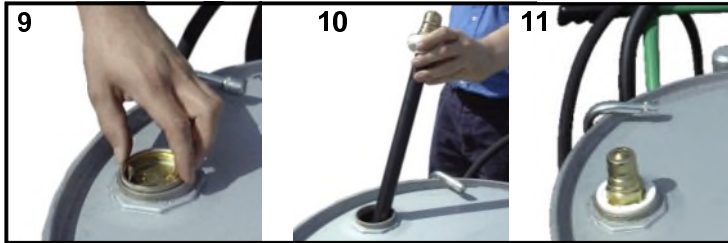


9) Remove large drum plug.


10) Insert plastic suction tube.

11) Fully screw down drum connector (hand tight only). Unscrew small drum plug by one and a half turns to allow drum to vent during pumping.

12) Connect suction hose quick release coupling

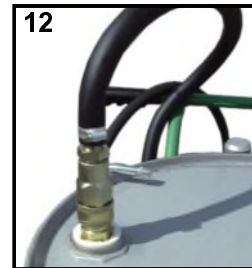

Connect suitable air line to quick release coupling on pump

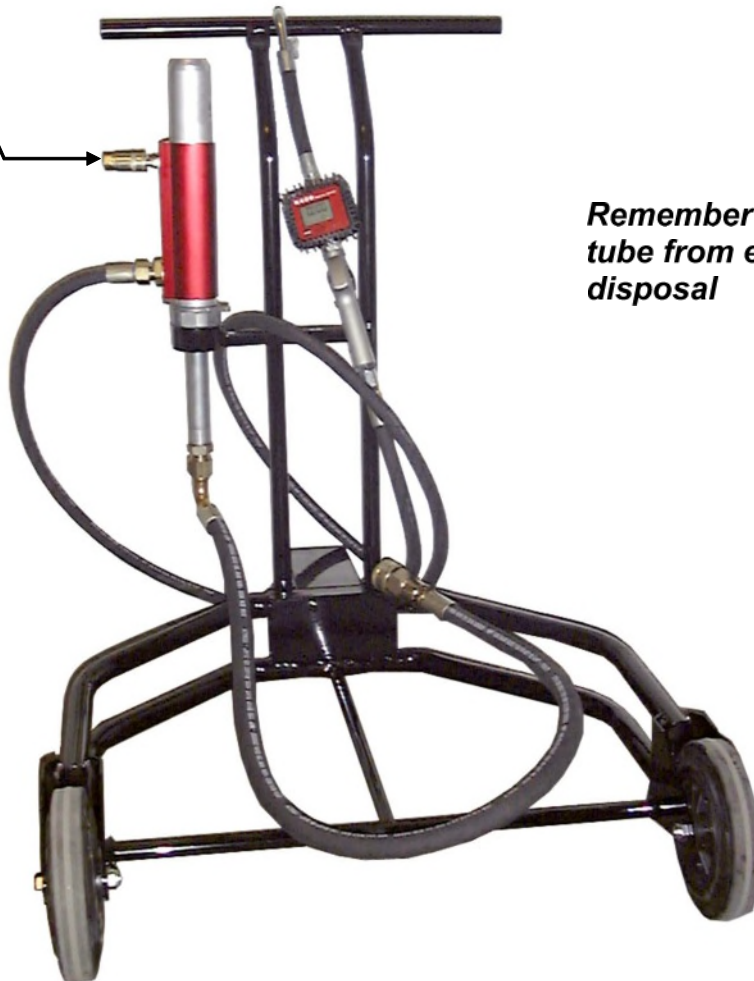

Remember to remove suction tube from empty drum before disposal

ERNEST H. HILL LIMITED

10-12 MEADOWBROOK PARK - STATION ROAD - HALFWAY - SHEFFIELD S20 3PJ - ENGLAND

Telephone; +44 (0) 114 248 4882

web site; <http://www.hillpumps.com>

Fax; +44 (0) 114 248 9142

e-mail; sales@hillpumps.com